

How to Light a Bunsen Burner

- 1) Close air intake (not too tight!)
Leave a tiny gap for air.
- 2) Open gas adjustment screw 1/4 turn counter-clockwise
- 3) Practice getting sparks with flint
- 4) Open gas tap fully. Light with flint. If unsuccessful after several tries, stop, turn off gas, and wait
- 5) Turn gas adjustment screw to obtain a small yellow flame.
- 6) Adjust air intake to obtain a blue flame with a light blue cone (counter-clockwise)

IF ANY PROBLEMS OCCUR, TURN OFF GAS TAP



Wear your goggles!!!

